


# Nova Urban Spares

## 51000 Standard Type

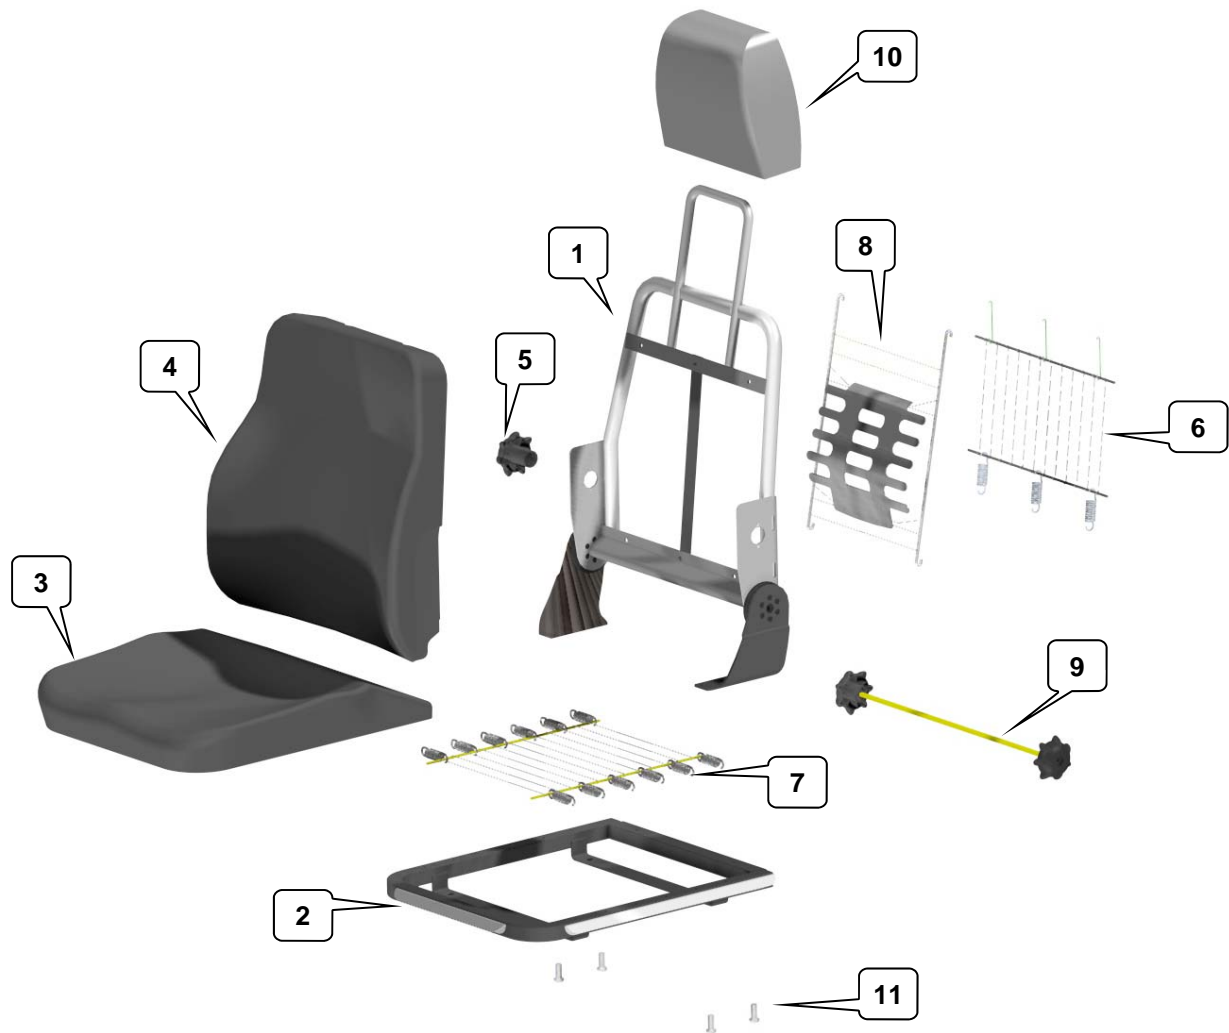

NO.	CDS PART-No.	CBP PART-No.	DESCRIPTION	NOTES
1	51300		SQUAB FRAME (URBAN)	COMES COMPLETE WITH NO.6
1	51300LS		SQUAB FRAME (URBAN)	WITH LUMBAR SUPPORT (NO.8)
2	51400		CUSHION FRAME (URBAN)	COMPLETE WITH SPRUNG MAT
3	31833	60.094	CUSHION FOAM (URBAN)	
4	31831	60.438	SQUAB FOAM	
5	33359	60.605	LUMBAR ADJUST KNOB + CAP	
6	33861		SQUAB MAT	
7	33861K	60.604	CUSHION MAT ASSY	MAT + SPRINGS
8	33320	60.075	LUMBAR ASSY	
9	33724K	60.159	RECLINE ADJUST ASSY KIT	2 x KNOB, CAP & SCREW + BAR
10	33826	60.078	HEADREST FOAM	
11	37958	60.102	M10x20 BUTTON HEAD BOLT	
	31890	60.103	CUSHION COVER	PLEASE SPECIFY TRIM
	31891	60.104	SQUAB COVER	PLEASE SPECIFY TRIM